


WEEKLY PROGRAMMABLE TIMER




CONNECTION DIAGRAM


TYPE A

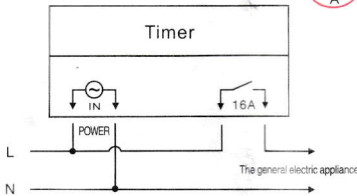


TYPE B

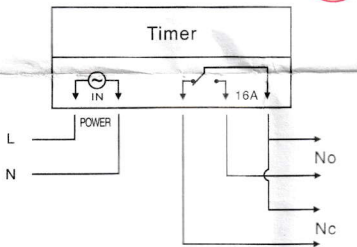

TYPE C

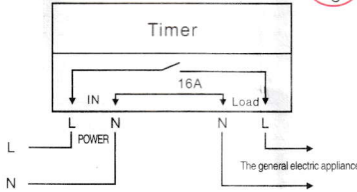

DIMENSIONS

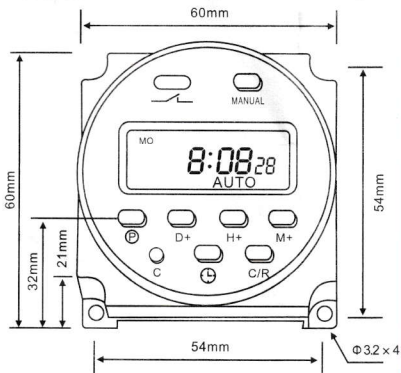

DIN Rail Installation

Advanced pre-setting one week before
 Digital electronic time switch with daily programs
 Repeat programs with 28 on/off setting; and manual over-ride
 Lithium battery power reserve
 Auto time error correction ±60sec, weekly

Unlock instructions (If your product doesn't come with a lock, skip the step)

Press the "C/R" button for the four time, and the "L" character disappears in the lower left corner of the display screen. At this time, the control switch is to unlock the state. All keys are valid, can be set or other operation. If not operated in 15 seconds, the time controlled switch is automatically locked. Such as finish setting up, you can also press the "C/R" button for four times, after manual lock button is invalid.

Shutdown Function

Press "H+" and "M+" at the same time for five seconds to turn off the timer. Press "C" to wake-up the timer.

TECHNICAL DATA

Voltage rating: AC 220V 50/60Hz
 Voltage limit: AC 180V-250V
 Hysteresis: ≤1 sec/day(25°C)
 ON/OFF operation: 28 ON & 28 OFF
 Power consumption: 2VA (max)
 Display: LCD
 Service life: Mechanical 10⁷
 Electrically 10⁵
 Minimum interval: 1 minute
 Weight: approx 40g


Order voltage

12V, 24V, 36V, 48V, 110V;
 Count down: 1 sec-99 min 56 sec
 Load capacity: resistive load: 16A/25V AC
 Lagging load: 10A/250Vac
 Lamp load: 2000W
 Switching contact: 1 changeover switch
 Power reserve: 3 years
 Ambient temperature: -10~+40°C
 Ambient humidity: 35-85%RH

DISPLAY



1	P	TIMER
2	D+	DAY
3	H+	HOUR
4	M+	MIN
5	⌚	CLOCK
6	C	RESET
7	MANUAL	MANUAL/Second
8	C/R	Cancel/recovery

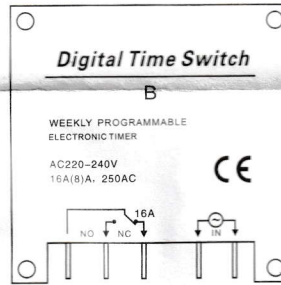

Operating Instruction:

- To start switch: press "C" Key, At the first time, if you want to the present time, please press "⌚" on board, then press D+, H+, M+ to adjust the number to the present time.
- Enter into programming as follows:

Step	Key	Programming
1	Press P	Setting 1 ON time (display 1 on)
2	Press H+/M+/MANUAL	Setting hours, minutes and seconds
3	Press D+	To select same every day, or different time each day
4	Press P	Setting 1 off time (display 1 off)
5	Press H+/M+/MANUAL	Setting hours minutes and seconds
6	Press D+	If you want the same every day, you need not press this key
7	Repeat step 2-6	Set 2-28 on/off time
8	Press ⌚	End

Error correction:

If you do not require 28 settings, press "⌚" to the end.

In clock mode, press "⌚" and "C/R" to enter the error time setting, the default display is 7D=00; press "D+" to adjust the error time, the adjustment range is 30 seconds, this time represents the specific time of one week's error; press the "⌚" key or no operation for 30 seconds to automatically jump to the clock mode; the system will be set to automatically adjust the weekly error time.


NOTE:

- Time setting should according to the time sequence, couldn't be set crossly
- System with quit automatically if there's no operating within 10 seconds and no data is saved.
- Function 3, 4, 5 can not be used simultaneously.




CE

1PCS

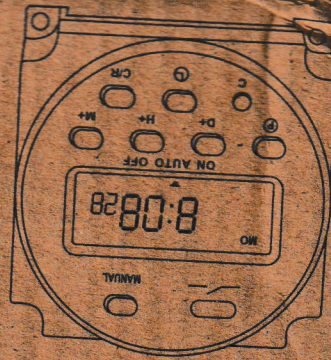

Timer

Timer PROGRAMMABILE TIMER

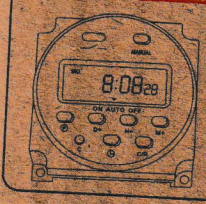

220VAC
1x18(0A)
240V
24h/7D
Reserve 3-5Y

CE

1PCS

Customize

TIMER

CE

QTY:1PCS



RECYCLE