

Thermostat

~~Set~~ • Short +/- slow ~~up/down~~ ; Long +/- fast up/down

• Short Press - "Set"

↳ use +/- to set trip temperature

• Long Press - "Set"

↳ "set" - select, "+/-" to go up/down

- P0 - Mode

↳ C* - Cooling; relay on above set temp

↳ H - Heating; " " below " "

- P1 - Offset temp

↳ $0.1^{\circ} \rightarrow 20.0^{\circ}$ (2.0° *) - relay will come on at set temp. Plus this offset. Set to $30.0^{\circ}\text{C} + 0.1^{\circ} =$ a set trip temp of 30.1°C .

- P2 - Max. Temp. Set

↳ $24 \rightarrow 120^{\circ}$ * - Adjust the maximum temperature the trip temp can be set to. Used to avoid user error.

- P3 - Min. Temp. Set

↳ $-55^{\circ} \rightarrow 14$ - Adjust the minimum temp the trip temp can be set to. (See above.)

- P4 - Thermometer Calibration

↳ $-10.0^{\circ} \rightarrow 10.0^{\circ}$ (0.0° *) - adjusts the temperature reading by set amount.

P5 - Delay

↳ $0^{\circ} \rightarrow 10$ - In min

↳ how long after triptemp. to turn on (no delay for off)

P6

↳ ON/OFF* $\rightarrow 0 \rightarrow 120$ (100*)

